


ISS. LEVEL: 01	ISSUE DATE: 05 Jun 2018	SUPERSEDES: NONE	AUTH. 
DOC REF: AEU01021	TITLE: WORK INSTRUCTION – FIRE ALARM RESET FOR AEUB		

1 Purpose- To be able to reset the Fire Alarm when a fault sound has been activated and after the fault has been established.

2 Procedure • GO TO SAMPLE STORAGE ROOM

• TURN KEY TO ENABLE

• PRESS SILENCE ALARM

• PRESS RESET

• TURN KEY BACK TO NORMAL

**PLEASE NOTE, THE FOLLOWING PERSONNEL SHOULD BE PRIORITY TO
PERFORM THIS PROCEDURE**

Health & Safety Manager

Maintenance & Machine Build Manager

Fire Wardens